

VTrack Tee Area Setting Guide

How to Disable Fixed Tee Area Setting

Issue: "Not detecting the ball"

Solution: Disable the Fixed Tee Area setting by following the steps below.


STEP 1: Open Settings

Click the Settings icon (⚙️) in the top-right corner of the VTrack main screen.




STEP 2: Select "Device" Tab

In the left menu, click on "Device".

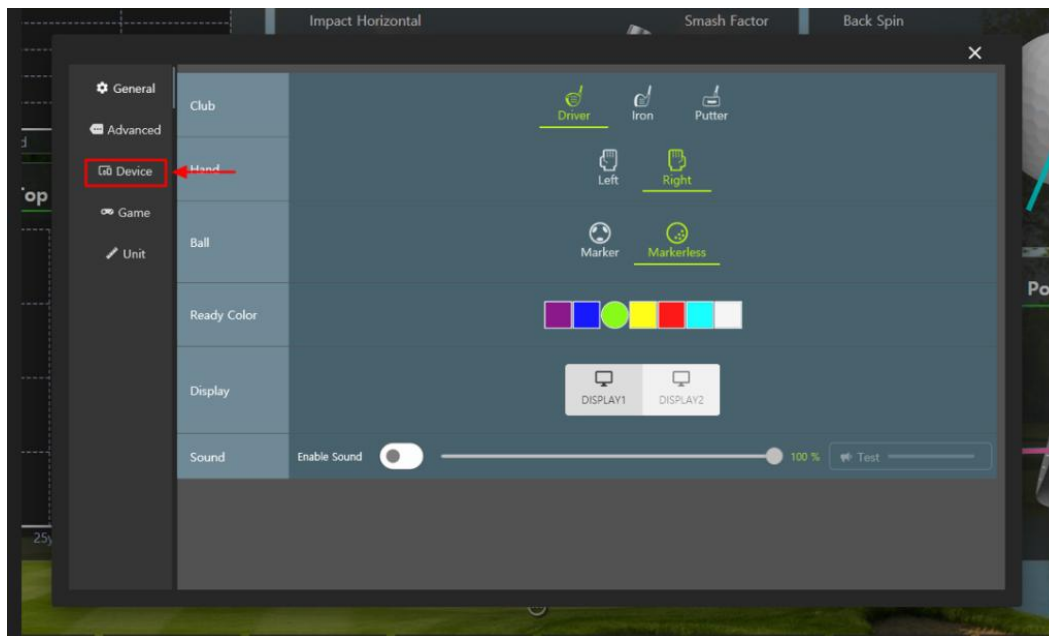

STEP 3: Go to "Area Setting"


Click on the "Area Setting" tab at the top.

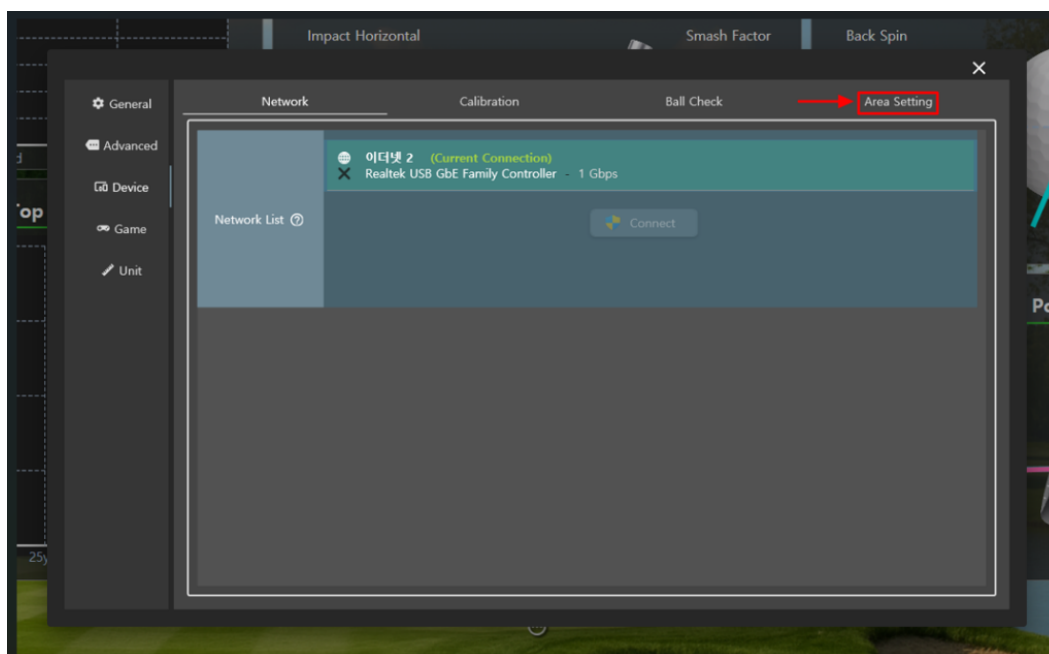

STEP 4: Set "READY" to "NON-FIXED" and Apply

Under "READY", select "NON-FIXED".


* Important: Make sure to press the green "Apply" button on the right to move onto the next step.

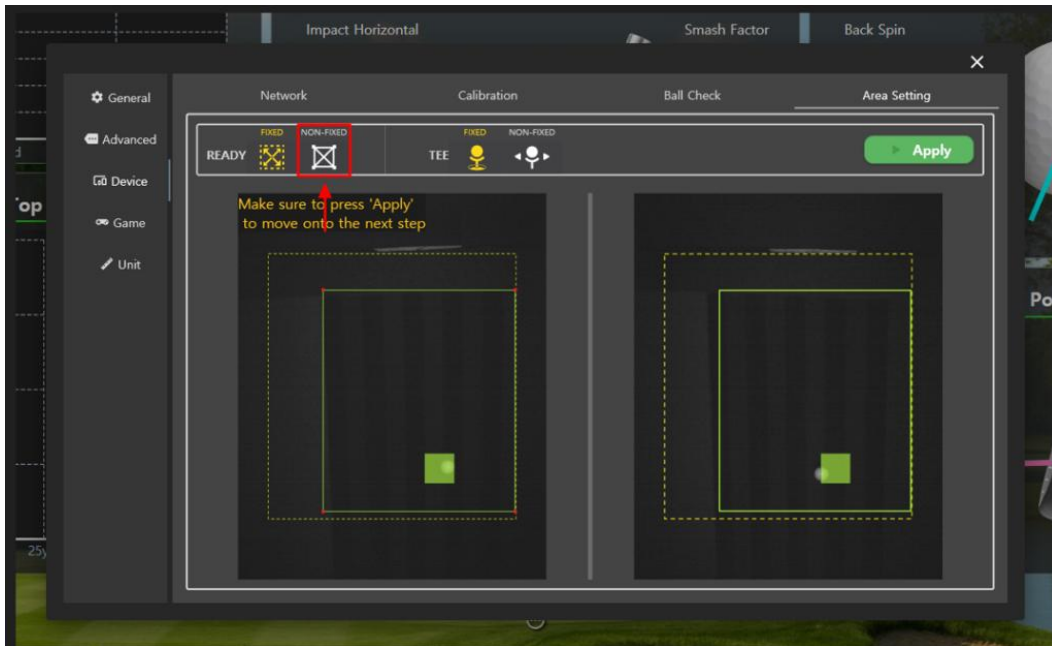

STEP 5: Set "TEE" to "NON-FIXED" and Apply

Under "TEE", select "NON-FIXED".

* Important: Make sure to press the green "Apply" button on the right to move onto the next step.

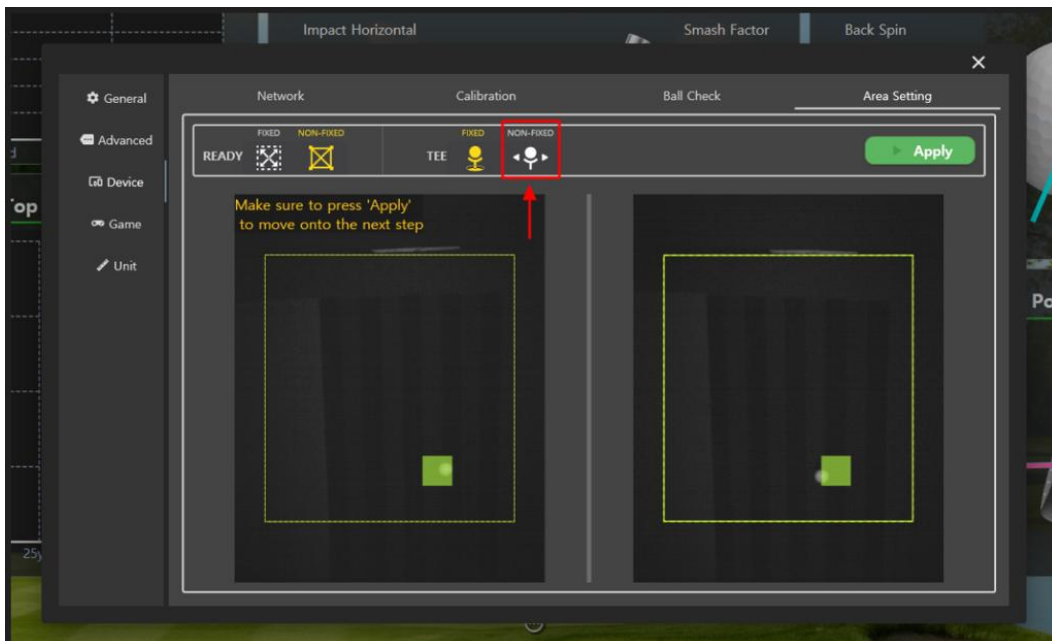

STEP 6: Verify Settings and Final Apply

Verify that both "READY" and "TEE" are set to "NON-FIXED", then click the green "Apply" button to save all settings.

